



Speed Stream 6520

Page 2 – General Information

Page 3-4 – New Setup Guide



General Information



Example Front Panel

Front Panel LEDs

The front panel contains the following LEDs:

Power	Green	Power is on.
	Off	Power is off.
Ethernet	Red	The Power LED briefly shows red during power-up. This indicates that the SpeedStream is conducting the POST (Power-On Self Test) that is run each time the SpeedStream is powered on.
	On	One or more Ethernet LAN ports are active.
Wireless	Off	No active Ethernet LAN port connection.
	On	Wireless connection is active.
DSL	Off	No active wireless connection.
	On	DSL connection is active.
Internet	Off	No active DSL connection.
	Green	Internet connection has been established.
Activity (if present)	Off	No data being transmitted or received.
	Flashing	Data is being transmitted or received.
USB (if present)	On	USB connection is active.
	Off	No active USB connection.
HPNA (if present)	On	HPNA connection is active.
	Off	No active HPNA connection.
HomePlug (if present)	On	Powerline connection is active.
	Off	No active powerline connection.



Example Rear Panel

Rear Panel

DSL Port (RJ11)	Connect the RJ11 DSL cable (looks like a telephone cord) here to use your DSL connection through an existing phone line.
USB Port	If your Gateway has a USB port, connect the USB cable here. The USB driver software must be installed from the provided CD-ROM.
10/100 Ethernet Ports 1 - 4	Connect the RJ45 Ethernet cable here to connect your computers, hubs, or switches to the Gateway. If your model has four ports, you can configure port #4 as either a LAN or WAN port.
Power Adapter Port	Connect the supplied power adapter provided with the Gateway here.
Power Button	Push this button to power the Gateway on and off.



Setup Guide

1. Open internet explorer, in the address bar type <http://192.168.254.254>



2. Entering the below details in the fields provided. Once completed, click the **Next** button.

Username: admin

Password: admin

Confirm Password: admin

SIEMENS Welcome to the SpeedStream DSL Gateway

2. Gateway Administrator Setup

Your Gateway requires someone to be the **Gateway Administrator**. This person has responsibility for adding user profiles, setting each person's access rights, and configuring the Gateway.

Please create a user name and password for the Gateway administrator.

IMPORTANT: THE ISP CHALLENGES THE USE OF PASSWORDS FOR ACCESS AND CONFIGURATION OF THE GATEWAY.

User Name: (required)

New Password: (required)

Confirm Password: (required)

3. Enter the details required for your internet service. Once completed, click the **Next** button.

Username: user@sctelco.net.au

Password: Your Sctelco password

SIEMENS Welcome to the SpeedStream DSL Gateway

3. ISP Password

Enter or modify user name and password as given by your Internet Service Provider (ISP). If you do not have this information, please contact your ISP.

Setup for PPPoE & DSL Access Concentrator:

Username: (required)

Password: (required)

Access Code: (Optional)

Service Name: (Optional)

Auto-Generation of Password

Cost of Service Demand

Dial Up Mode



4. Leave all settings on the page as default & click the **Next** button




5. The following steps will help secure your wireless. Enter an **SSID(name)** for your wireless & click the **Next** button



6. Set the Security Mode to **WPA-PSK** & click the **Next** button.



7. Enter a **Password** for your wireless in the Shared Key Field & click the **Next** button

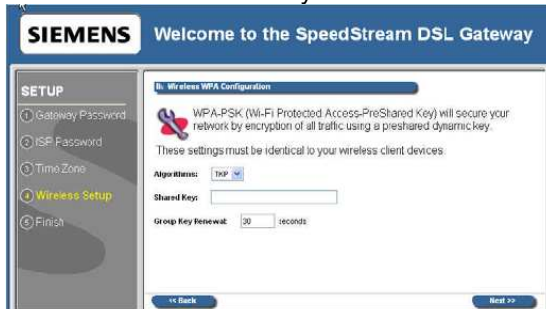

8. On the Next page, click the **Finish** button. You have now completed the setup guide. If you wait 10 minutes your internet connection will be connected & ready to use