

OWC Setup Guide


1. Once you have inserted the sim card into the dongle as per the manual include in your package, insert the USB Drive into your computer. After about 1 minute the below window will pop. Click the **Run Autorun.exe**




2. The setup wizard will load, click the **Next Button**




3. Read the **Terms & condition**. once you have read the details, click the **I Agree Button**

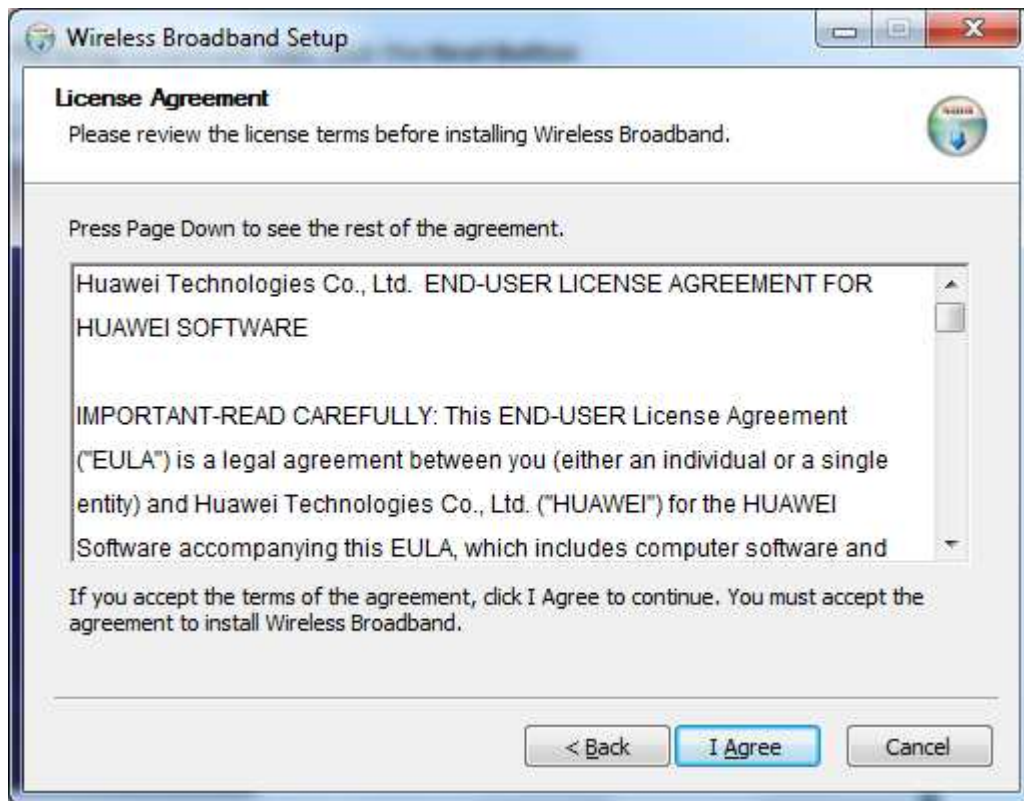


4. You will be prompted to select. By default this will select program files. If you are happy with this click the **Next Button**

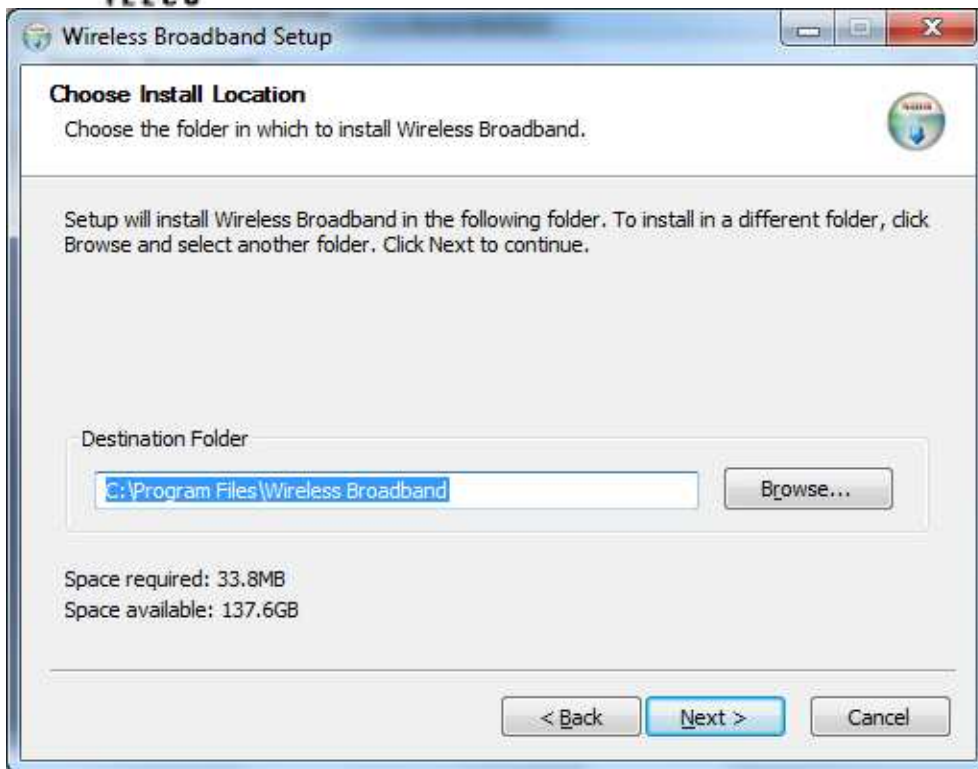

5. Click the **Install** Button

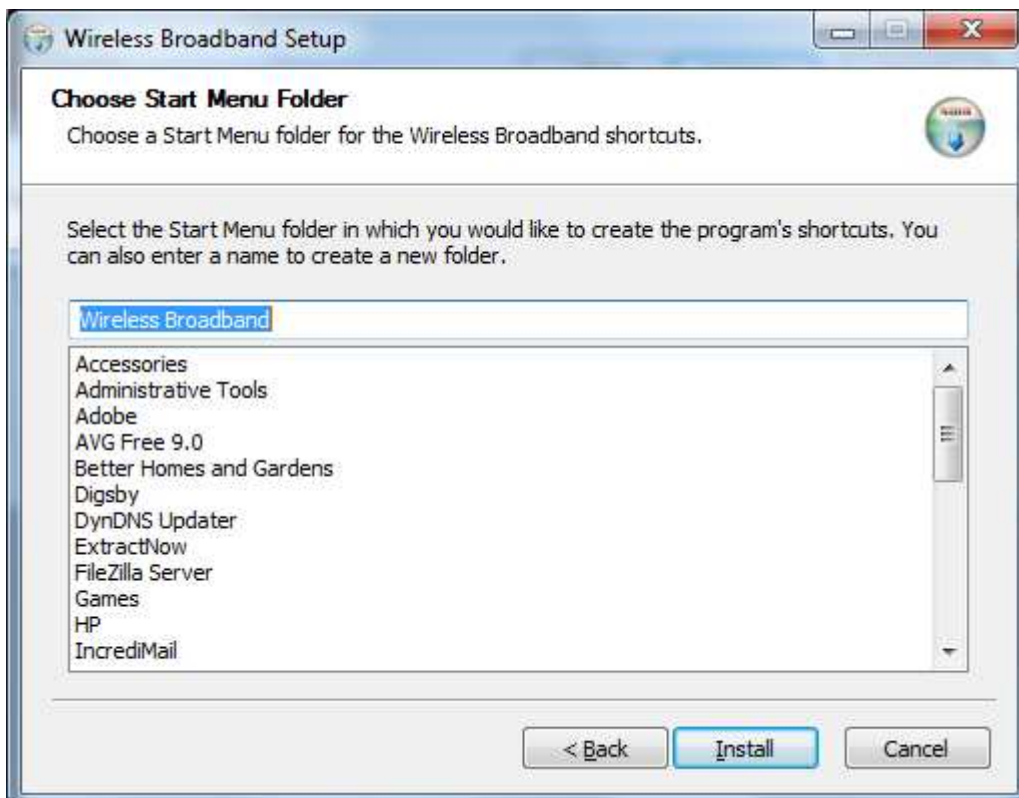


- Your computer will now install the Wireless Broadband Software.

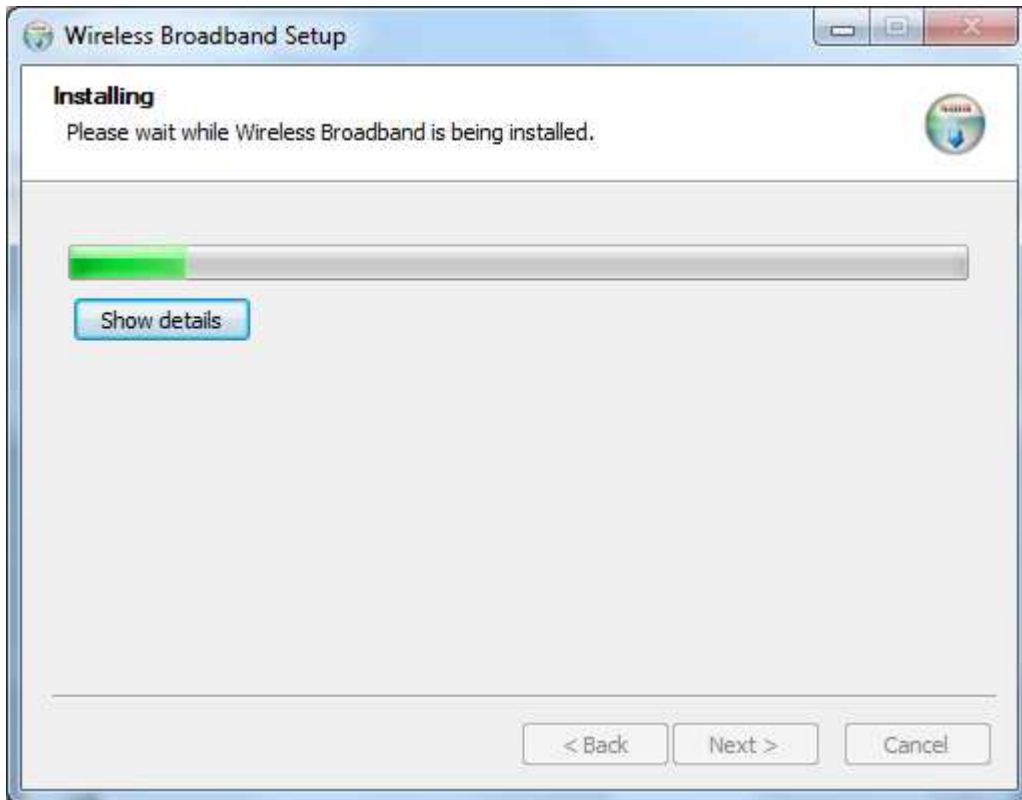


- Once the Setup has completed, you will be prompted with the below page. Click the **Finish** Button





8. On your Desktop you will now find the Wireless Broadband Software ()
Double click on this.
9. You will prompted for the SP Code. In the Field provided type '**broadband**' & click the **OK** button

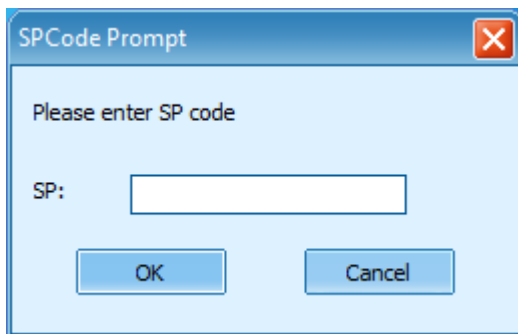



10. You have now completed the setup & are ready to connect. If you wish to connect straight away, click the Connect button in the middle of the page.

